


Associating a Standard Remote Control to a Powerlouvre™ Window or Remote Receiver Unit

Call 1 800 777 758 for further assistance.

figure one

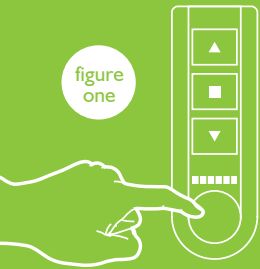


1

Prime the Window

Remove the power from the Powerlouvre™ Window or Remote Receiver Unit and ensure that you have the Standard Remote Control with the battery in it.

Restore the power to the Powerlouvre™ Window or Remote Receiver Unit and wait 5 seconds. Press the OPEN button (figure one) and hold for 1 second.

figure two

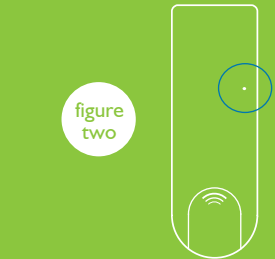


2

Prime the Standard Remote Control

Turn the Standard Remote Control over, you will notice a small hole about half way down on the right (figure two).

Insert a thin, stiff object (a straightened paperclip is ideal for this purpose) and push down on the button for 1 second.

figure three

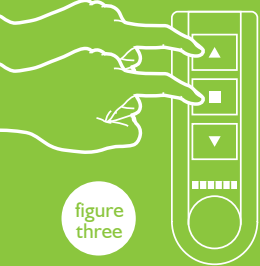


3

Program the Toggle Function

Turn the Standard Remote Control over and press the OPEN button for 1 second. Within two seconds press the TOGGLE button (figure three).

If you were unable to complete Step Three within 2 seconds, repeat Step Two and Step Three again.

figure four

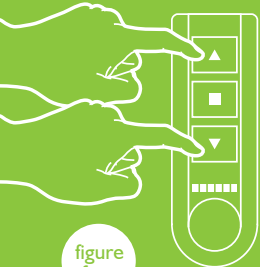

4

Program the Close Function

Repeat Step Two.

Turn the Standard Remote Control over and press the OPEN button for 1 second. Within 2 seconds press the CLOSE button (figure four).

If you were unable to complete Step Four within 2 seconds, repeat Step Two and Step Four again.

