

# Direct Programming of Remote receiver

Call 1 800 777 758 for further assistance.

## 1

### Setting Up a Remote Receiver

**To associate a Remote Control to a Remote Receiver:**

1. Power up the Remote Receiver and wait 5 seconds.
2. Press and hold B1, you will see L1 light up and stay lit (figure two).
3. Press and hold the OPEN button (figure one) on the remote control.
4. L1 will flash.
5. When the unit has learnt the code L2 will light up.
6. Release B1.
7. Repeat steps 2-5 for remaining buttons.

## 2

### Disassociating all Remote Controls

**To disassociate all Remote Controls from a Remote Receiver:**

1. Power up the Remote Receiver.
2. Press and release B2 briefly and press it down again within 1 second (figure two).
3. L2 will flash fast.
4. When the unit has deleted all the codes L2 will stay lit.

## 3

### Disassociating a single Remote Control

**To disassociate a single Remote Control from a Remote Receiver:**

1. Power up the Remote Receiver.
2. Press and hold B2 and L2 will flash slowly (figure two).
3. Press the button to be deleted on the Remote Control for 2 seconds (figure one).
4. When the unit has deleted the codes L2 will stay lit.

## 4

### Checking to see if a signal is being received

**To check to see that a remote signal is being received by the Remote Receiver:**

1. Power up the Remote Receiver.
2. Press and hold a button on an associated Remote Control (figure one).
3. While a button is held L2 (figure two) will light up if the Remote Control is associated with the Remote Receiver and a signal is being received by the Remote Receiver.

figure one

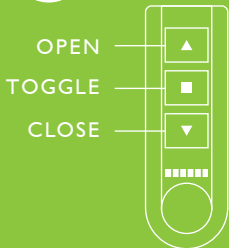


figure two

