


# Disassociating an Advanced Remote Control from a Powerlouvre™ Window or Remote Receiver Unit

Call 1 800 777 758 for further assistance.

figure one

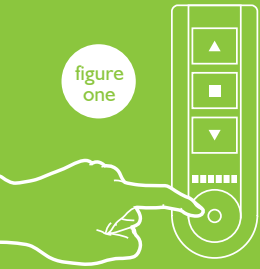

1

## Select Group

Use the SELECT button on the Advanced Remote Control (figure one) to choose which channel of the Advanced Remote Control the Powerlouvre™ Window or Remote Receiver Unit is to be disassociated from. The red LED indicates which group of Powerlouvre™ Windows or Remote Receiver Units will be operated by the Advanced Remote Control. Pressing the Select button once will indicate the group of Powerlouvre™ Windows or Remote Receiver Units that is currently being controlled. Pressing the SELECT button again will change which group of windows or units will be controlled.

After 5 minutes of inactivity, control reverts to the upper bank in the first group of windows or the first channel in the first Remote Receiver Units..




2

## Prime the Remote Control

Turn the Remote Control that you wish to disassociate from the Powerlouvre™ Window or Remote Receiver Unit over, you will notice a small hole about half way down on the right (figure two).

Insert a thin, stiff object (a straightened paperclip is ideal for this purpose) and push the button 3 times.

figure two

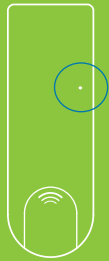


3

## Disassociate the Open Function

Within 2 seconds of completing Step One, turn the Remote Control over and press the OPEN button for 1 second (figure three).

If you were unable to complete Step Three within 2 seconds of Step Two, repeat the Step One and Step Three again.

figure three

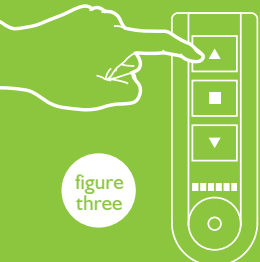

4


## Disassociate the Toggle Function

Repeat Step Two.

Within 2 seconds of completing Step Two, turn the Advanced Remote Control over and press the TOGGLE button for 1 second (figure four).

If you were unable to complete Step Four within 2 seconds of Step Two, repeat Step Two and Step Four again.

figure four

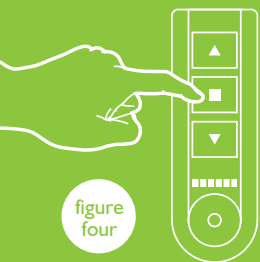

5

## Disassociate The Close Function

Repeat Step Two. Within 2 seconds of completing Step Two, turn the Advanced Remote Control over and press the CLOSE button for 1 second (figure five). If you were unable to complete Step Five within 2 seconds of Step Two, repeat Step Two and Step Five again.

The Advanced Remote Control is now disassociated from the group of Powerlouvre™ Windows or Remote Receiver Units indicated by the red LED lights. If the Advanced Remote Control is to be disassociated from all the windows or units associated with it, Steps One to Five will need to be repeated for each channel of the Advanced Remote Control.

To only disassociate the Advanced Remote Control from selected windows or units within a group, remove power from the windows or units within the group that are to remain associated with the Advanced Remote Control before carrying out Steps Two to Five.

figure five

