 


Disassociating a Standard Remote Control from a Powerlouvre™ Window or Remote Receiver Unit

Call 1 800 777 758 for further assistance.

figure one

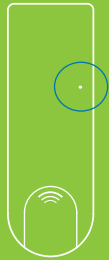

1

Prime the Standard Remote Control

Turn the Standard Remote Control that you wish to disassociate from the Powerlouvre™ Window over, you will notice a small hole about half way down on the right.

Insert a thin, stiff object (a straightened paper clip is ideal for this purpose) and push the button 3 times.

figure two



2

Disassociate the Open Function

Within 2 seconds of completing Step One, turn the Standard Remote Control over and press the OPEN button for 1 second (figure two).

If you were unable to complete the Step Two within 2 seconds of Step One, repeat Step One and Step Two again.

figure three



3

Disassociate the Toggle Function

Repeat Step One.

Within 2 seconds of completing Step One, turn the Standard Remote Control over and press the TOGGLE button for 1 second (figure three).

If you were unable to complete Step Three within 2 seconds of Step One, repeat Step One and Step Three again.

figure four



4

Disassociate The Close Function

Repeat Step One.

Within 2 seconds of completing Step One, turn the Standard Remote Control over and press the CLOSE button for 1 second (figure four).

If you were unable to complete Step Four within 2 seconds of Step One, repeat Step One and Step Four.

