

# Operating Instructions - Advanced Remote Control

Call 1 800 777 758 for further assistance.

Powerlouvre Windows are operated remotely by a Remote Receiver. The Remote Receiver may be concealed within the Breezway Easyscreen Window frame, or housed externally in a casing when Powerlouvre Windows in component form are installed in timber, commercial or other frames. A Remote Receiver within an external casing is known as a Remote Receiver Unit.


Remote Receiver Units have 2 channels. Each channel can operate up to 6 Powerlouvre motors simultaneously but the 2 channels cannot be operated simultaneously.

Powerlouvre Easyscreen Windows are all wired identically. Powerlouvre Easyscreen Windows 2-9 blades high use a single channel of the Remote Receiver to operate all the motors, and therefore all the blades, within the window simultaneously. Powerlouvre Easyscreen Windows 10-18 blades high use the first channel of the Remote Receiver to simultaneously operate the motors controlling the blades in the upper halves of each bay and the second channel of the Remote Receiver to simultaneously operate the motors controlling the blades in the lower halves of each bay.


Powerlouvre Windows controlled by external Remote Receiver Units can be installed in multiple different ways including each channel of the Remote Receiver Unit operating all blades of 10-18 blade high Powerlouvre Windows or multiple windows of different sizes simultaneously. Please consult your supplier or installer to confirm the configuration of your windows.

Multiple Powerlouvre Easyscreen Windows or Remote Receiver Units can be controlled simultaneously by a single Standard Remote Control, or each one can be controlled independently by individual Standard Remote Controls.

Up to 6 groups of Powerlouvre™ Windows or Remote Receiver Units can be controlled from one Advanced Remote Control. Each grouping of Powerlouvre™ Windows or Remote Receiver Units can consist of a single window or unit or multiple windows or units. The group of Powerlouvre™ Windows or Remote Receiver Units being controlled is indicated by the LED lights at the bottom of the remote control. The SELECT button on the Advanced Remote Control is used to select which group of windows or units will be operated by the Advanced Remote Control.

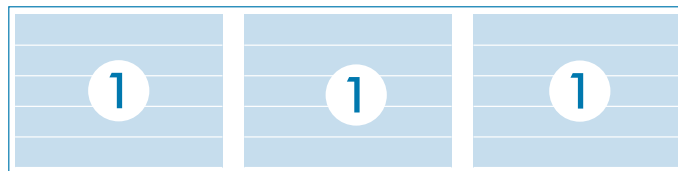

2-9 Blades high - all blade operate simultaneously

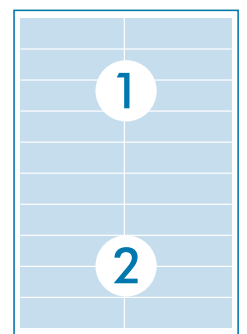

10-18 Blades high - the upper bank can operate independently to the lower bank

# Operating Instructions - Advanced Remote Control

Call 1800 777 758 for further assistance.

## Operation

### To OPEN the Powerlouvre™ Window

To fully OPEN the Powerlouvre™ Window briefly press the top OPEN button (figure one) on the Remote Control. To partially OPEN the Powerlouvre™ Window press and hold the OPEN button (figure one) on the Remote Control and release it when the window has reached the desired position.

### To CLOSE the Powerlouvre™ Window

To fully CLOSE the Powerlouvre™ Window briefly press the bottom CLOSE button (figure two) on the Remote Control. To partially CLOSE the Powerlouvre™ Window press and hold the CLOSE button (figure two) on the Remote Control and release it when the window has reached the desired position.

### Stopping the Powerlouvre™ Window

At any time when the Powerlouvre Window is opening or closing, press the middle TOGGLE button (figure three) on the Remote Control to stop the window.

### Switching Control Between Groups of Windows or Remote Receiver Units

Use the SELECT button (figure four) to select which group of windows or units to control. The LED LIGHTS indicate which group of Powerlouvre™ Windows or Remote Receiver Units will be operated by the Advanced Remote Control. Pressing the SELECT button once will indicate the group of Powerlouvre™ Windows or Remote Receiver Units currently being controlled. Pressing the SELECT button again will change which group of windows or units will be controlled.

**Note:** If less than 6 groupings of Powerlouvre™ Windows or Remote Receiver Units are associated with an Advanced Remote Control, the 6th channel on the Advanced Remote Control can be used to control all 5 groupings of windows or units simultaneously. After 5 minutes of inactivity, control reverts to the upper banks in the first group of windows.

## Switching Between Controlling the Upper and Lower Blades or Between Channels of the Remote Receiver Unit

### To Toggle Between Controlling The Upper And Lower Banks or Between Channels of the Remote Receiver Unit

To toggle between banks or channels press the TOGGLE button (figure five) briefly. (< 1 second).

**NOTE:** After 30 seconds the Remote Control will default back to controlling the upper bank or first channel. On 2-9 blade high Powerlouvre™ Windows or Remote Receiver Units with only a single channel activated, the TOGGLE button only functions as a stop button.

### To AUTO Close the Entire Powerlouvre™ Window or All Channels of the Remote Receiver Unit

To quickly and fully CLOSE the entire Powerlouvre™ Window or both channels of the Remote Receiver Unit from any position, press and hold the middle TOGGLE button on the Advanced Remote Control for 3 seconds. The top banks or first channel will close first, followed by the lower banks or second channel.


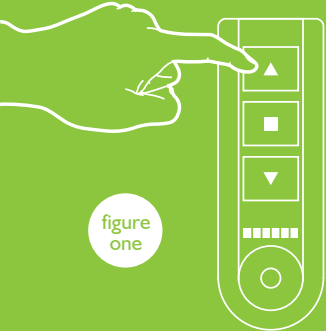


figure one



Group 1 selected

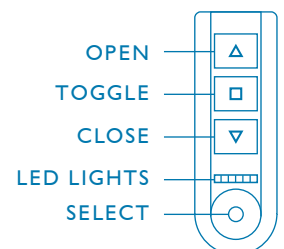

Group 3 selected

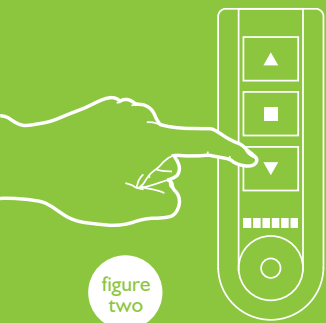


figure two

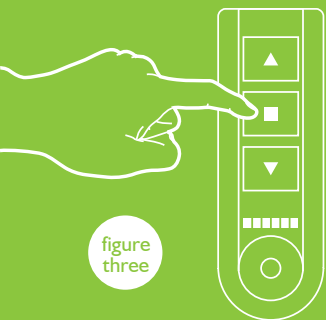


figure three

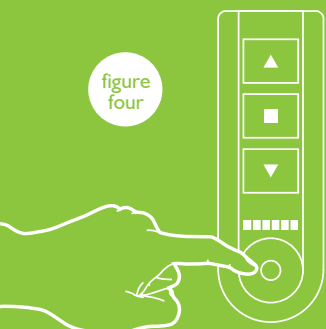


figure four