


Altair® Louvre Keylock Functionality

Figure 1

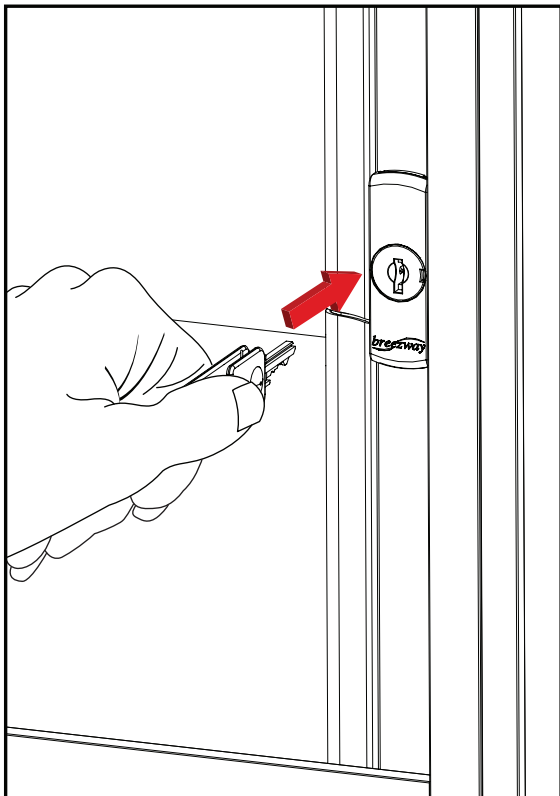

TO LOCK

Insert key as shown in Figure 1 and fold key fob as shown in Figure 2 to allow leverage.

Figure 2


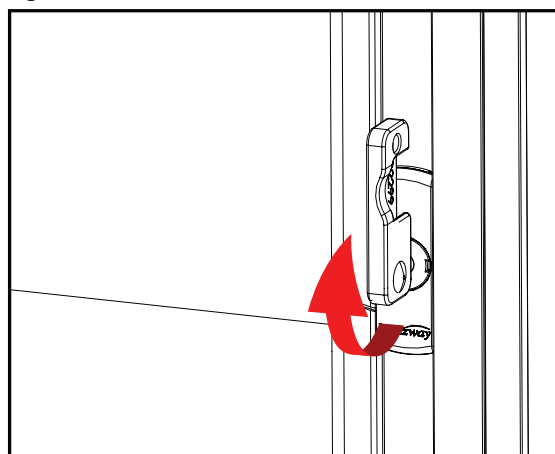



Figure 3

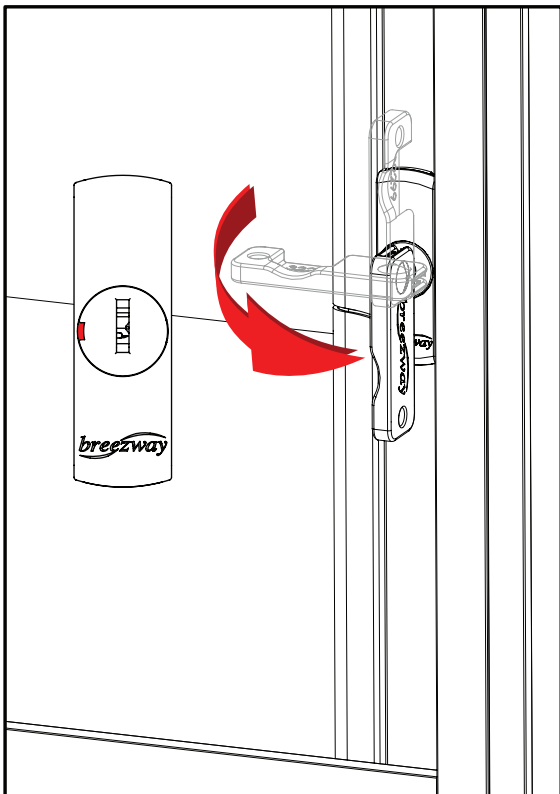

Rotate key into locked position, note red locked indicator on barrel face when in the locked position.


Altair® Louvre Keylock Functionality

Figure 4

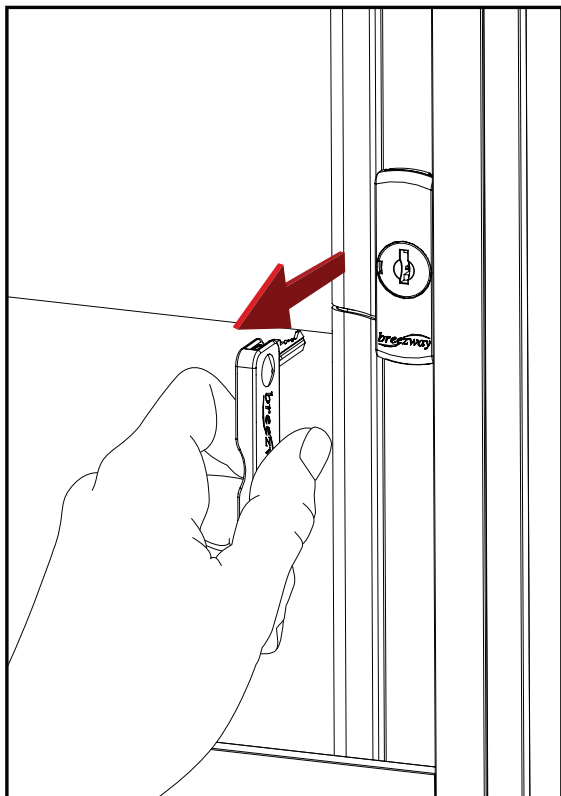

Remove key to secure locking barrel in place. Lock is not secured until key is removed from barrel as shown in Figure 4. Window is now locked.


Figure 5

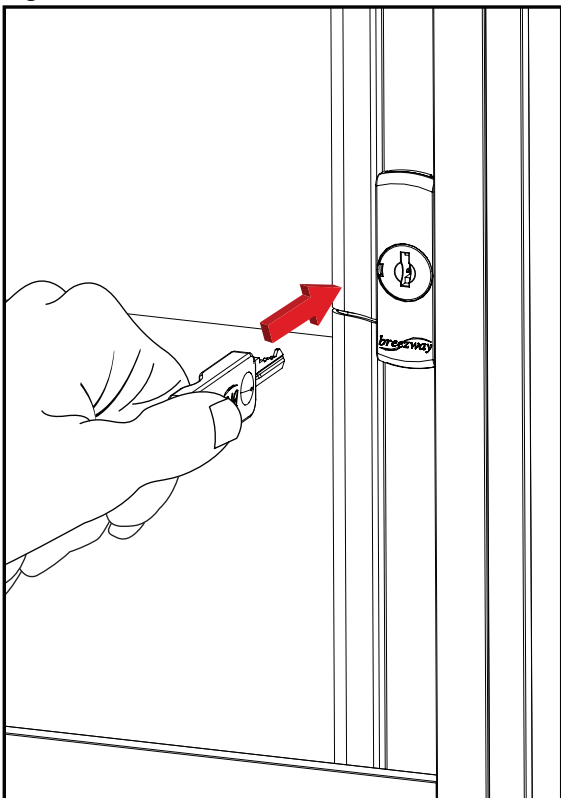

TO UNLOCK


Insert key as shown in Figure 5 and fold key fob in position as shown in Figure 6.

Figure 6

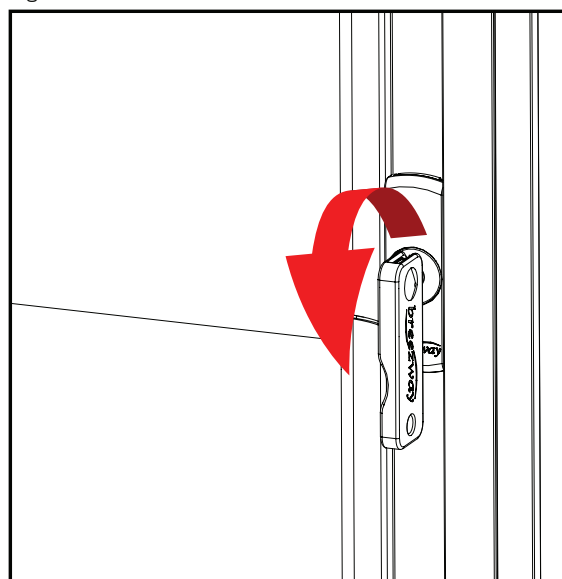


Altair® Louvre Keylock Functionality

Figure 7

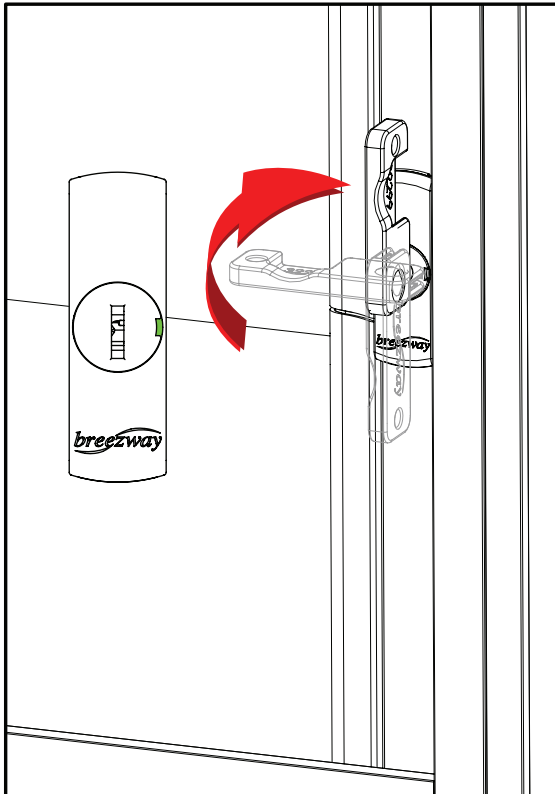

Rotate key into unlocked position, note green unlocked indicator on barrel face when in the unlocked position as shown in Figure 7.

Figure 8

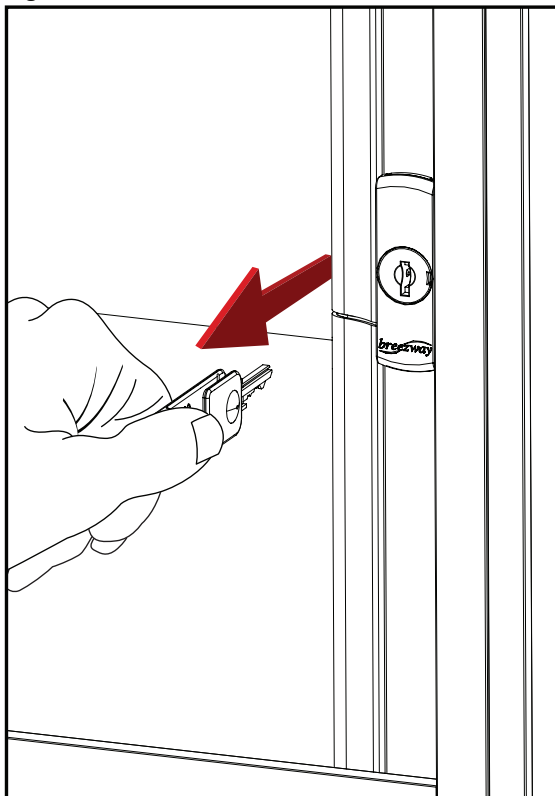

Remove key after barrel is rotated into unlocked position, the window is now unlocked.