


Altair Louvre Keylock Functionality


Figure 1

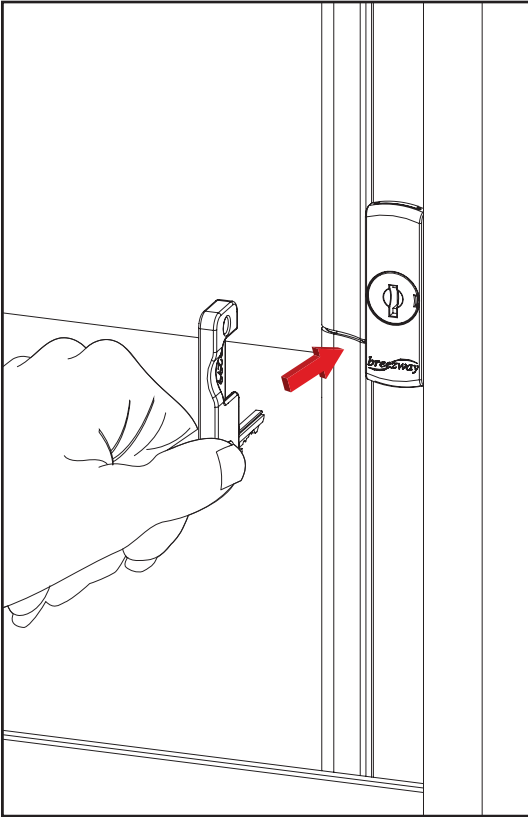

TO LOCK

Insert key as shown in Figure 1.


Figure 2

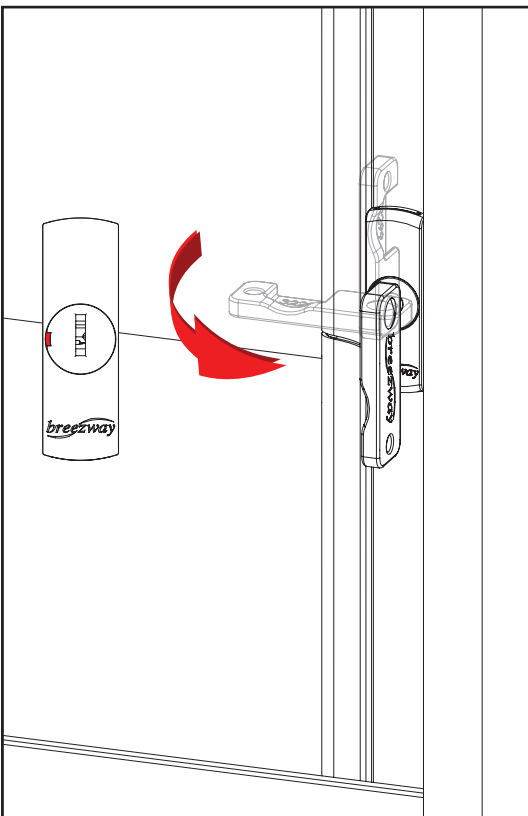

Rotate key into locked position, note red locked indicator on barrel face when in the locked position as shown in Figure 2.


Altair Louvre Keylock Functionality

Figure 3

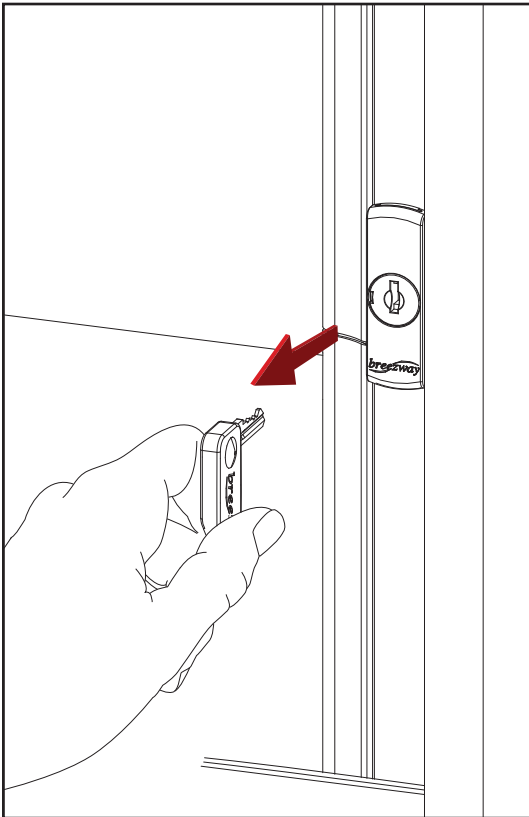

Remove key to secure locking barrel in place. Lock is not secured until key is removed from barrel as shown in Figure 3. Window is now locked.

Figure 4

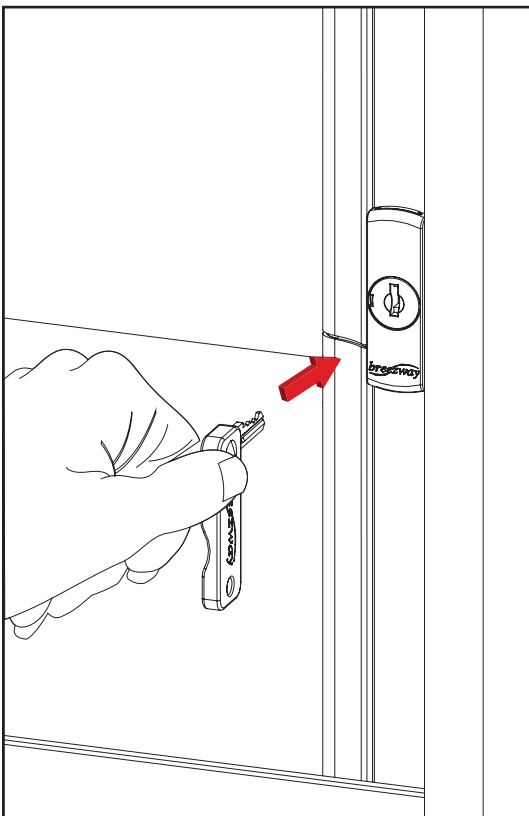


TO UNLOCK

Insert key as shown in Figure 4.


Altair Louvre Keylock Functionality

Figure 5

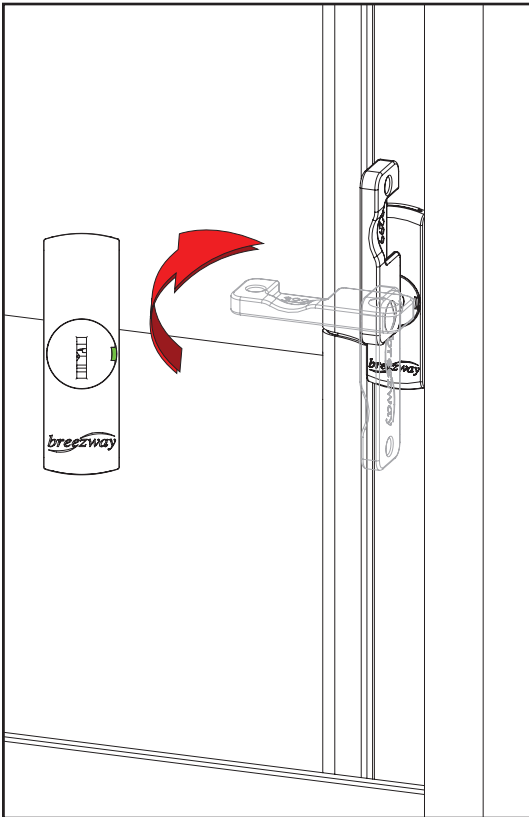

Rotate key into unlocked position, note green unlocked indicator on barrel face when in the unlocked position as shown in Figure 5.

Figure 6

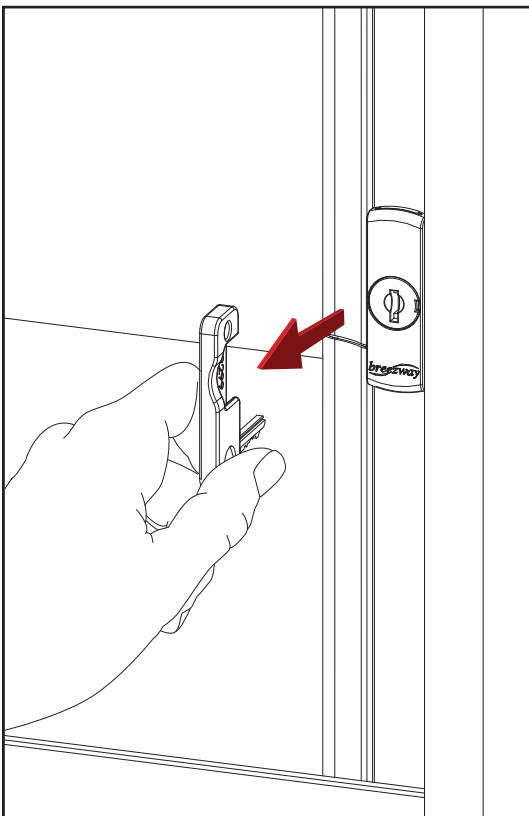

Remove key after barrel is rotated into unlocked position, the window is now unlocked.