


Associating an Advanced Remote Control to a Powerlouvre™ Windows or Remote Receiver Units

Call 1 800 777 758 for further assistance.

figure one

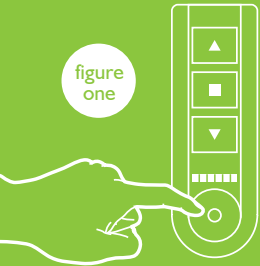

1

Select Group


Use the SELECT button on the Advanced Remote Control (figure one) to choose which channel of the Advanced Remote Control the Powerlouvre™ Window or Remote Receiver Unit is to be associated with. The LED LIGHTS indicate which group of Powerlouvre™ Windows or Remote Receiver Units will be operated by the Advanced Remote Control.

Pressing the SELECT button once will indicate the group of Powerlouvre™ Windows or Remote Receiver Units that is currently being controlled. Pressing the SELECT button again will change which group of windows or units will be controlled.

Note: If less than 6 groupings of Powerlouvre™ Windows or Remote Receiver Units are associated with an Advanced Remote Control, the 6th channel of the Advanced Remote Control can be used to control all groupings of windows or units simultaneously. After 5 minutes of inactivity, control reverts to the upper bank or first channel in the first group of windows or units.



figure two

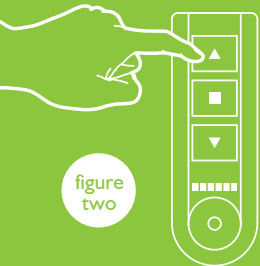

2


Prime the Window

Remove power from the Powerlouvre™ Window or Remote Receiver Unit and ensure that you have the Advanced Remote Control with the battery in it.

Note: If multiple windows or units are attached to a single power source, power will be restored to all the windows or units simultaneously and all the windows or units will be primed.

Restore the power to the Powerlouvre™ Window or Remote Receiver Unit and wait 5 seconds. Press the OPEN button (figure two) and hold for 1 second.

figure three

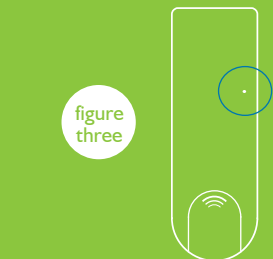


3

Prime the Remote Control

Turn the Advanced Remote Control over, you will notice a small hole about half way down on the right (figure three). Insert a thin, stiff object (a straightened paperclip is ideal for this purpose) and push down on the button for 1 second.

figure four

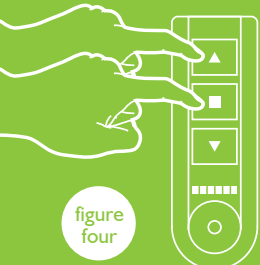


4

Program the Toggle Function

Turn the Advanced Remote Control over and press the OPEN button for 1 second. Within two seconds press the TOGGLE button (figure four). If you were unable to complete Step Four within 2 seconds, repeat Step Three and Step Four again.

figure five

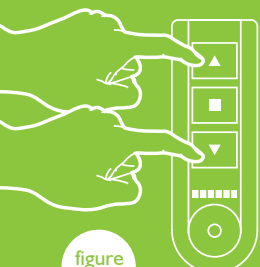


5

Program the Close Function

Repeat Step Three.

Turn the Advanced Remote Control over and press the OPEN button for 1 second. Within two seconds press the CLOSE button (figure five). If you were unable to complete Step Five within 2 seconds, repeat Step Three and Step Five again.

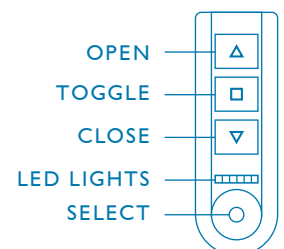

breezway™
light · air · space